External
Fax Modem 56K

Quick Installation Guide

M73-APO02-260

Downloaded from www.Manualslib.com manuals search engine

HARDWARE INSTALLATION

Hardware Connections

To install the External Fax Modem 56K card perform the following steps:

Turn off your computer. Make sure the power switch of your External Fax Modem 56K is also set to off.

1. Connect the RS-232 cable to your External Fax Modem 56K with one end to the **RS-232** port on the rear panel of the External Fax Modem 56K and the other end to the COM port of your computer.

2. Connect the provided power adapter to the **AC IN** port and the other end into a wall outlet.

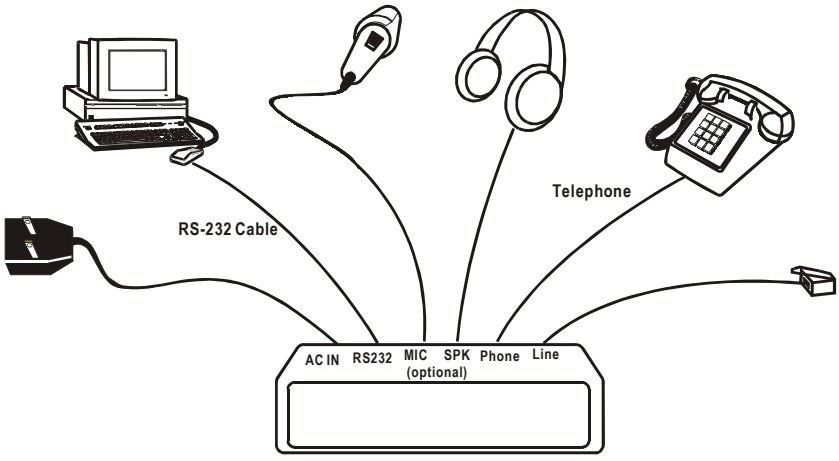

3. Power on your computer and turn the Power Switch ON.

Downloaded from www.Manualslib.com manuals search engine

4. Connect the telephone line to the RJ-11 **Line** port, connect the other end of the line into a telephone jack in your wall. If you want to use the telephone concurrently, connect telephone line to the port labeled **Phone** with another end of the connected to your telephone set.

Note: Use only the power adapter provided with this unit or refer to the rear panel for the correct power adapter. Using any incorrect power adapters will cause permanent and unpredictable damage to this External Fax Modem 56K.

Downloaded from www.Manualslib.com manuals search engine

SOFTWARE INSTALLATION

Installation for Windows 95/98

1. Be sure the External Fax Modem 56K is well connected to your computer. Turn on your computer and start Windows.
2. Windows will automatically detect the new hardware device. Click **Next**.
3. Load the External Fax Modem 56K floppy disk or compact disc into your computer. When Windows prompts you **What do you want Windows to do**? Select **Search for the best driver for your device. (Recommended).** Click **Next**.
4. Follow the on-screen instructions to proceed. The installation program will proceed automatically.
5. When Windows finish copying all the necessary files to your computer, window will prompt you to complete the installation, click **Finish**.

Installation for Windows 2000

1. Be sure the External Fax Modem 56K is well connected to your computer. Turn on your system and start Windows 2000.

Downloaded from www.Manualslib.com manuals search engine

2. Go to **Start→Settings→Control Panel→System→Hardware→Device Manager.**

3. **Modem** icon should be found if Windows 2000 detects the modem. If not, go to **Start→Settings→Control Panel→Phone and Modem Options.**

4. Click the **Modem** tab and press the **Add** button to add it in.

5. Click **Next** to set up the modem.

6. Click **Finish.**

7. Go back to your desktop, and click **Start→Settings→Control Panel→System→Hardware→Device Manager.**

Downloaded from www.Manualslib.com manuals search engine

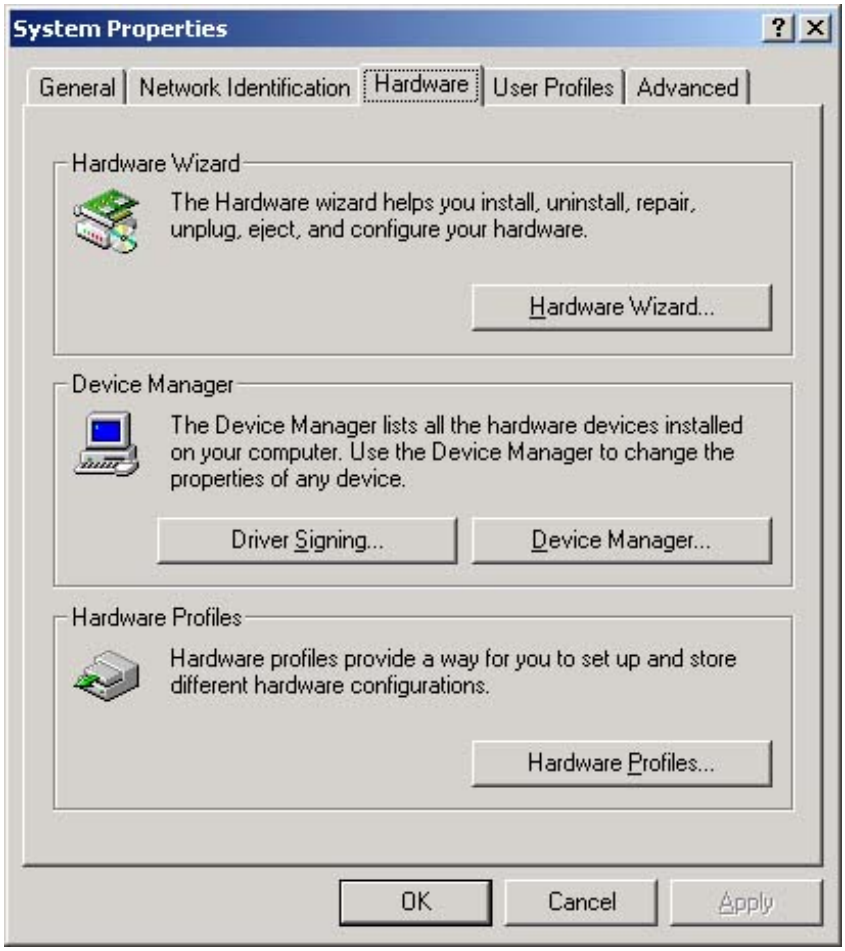
System Properties
General
Network Identification
Hardware
User Profiles
Advanced
Hardware Wizard
The Hardware wizard helps you install, uninstall, repair, unplug, eject, and configure your hardware.
Hardware Wizard...
Device Manager
The Device Manager lists all the hardware devices installed on your computer. Use the Device Manager to change the properties of any device.
Driver Signing...
Device Manager...
Hardware Profiles
Hardware profiles provide a way for you to set up and store different hardware configurations.
Hardware Profiles...
OK
Cancel
Apply

8. Click **Modems** to expand. Right-click **Lucent Venus Modem PnP** and select **Properties.**

9. Click the **Driver** tab and press the **Update Driver** button.

Downloaded from www.Manualslib.com manuals search engine

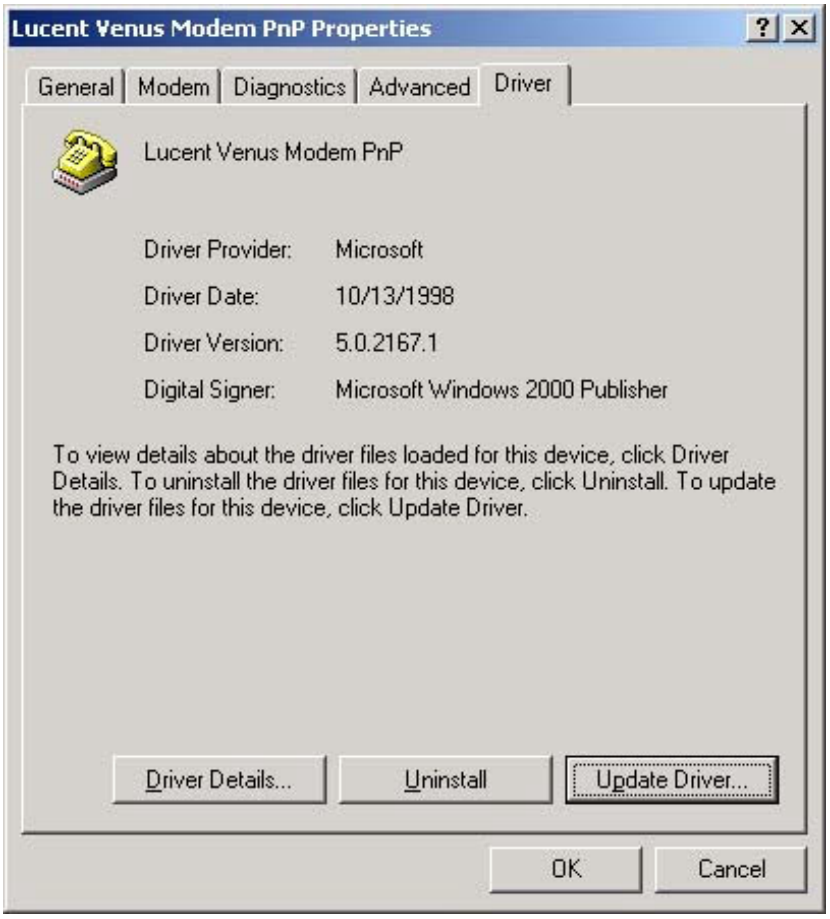
Lucent Venus Modem PnP Properties
General
Modem
Diagnostics
Advanced
Driver
Lucent Venus Modem PnP
Driver Provider: Microsoft
Driver Date: 10/13/1998
Driver Version: 5.0.2167.1
Digital Signer: Microsoft Windows 2000 Publisher
To view details about the driver files loaded for this device, click Driver Details. To uninstall the driver files for this device, click Uninstall. To update the driver files for this device, click Update Driver.
Driver Details...
Uninstall
Update Driver...
OK
Cancel

10. When the **Upgrade Device Driver Wizard** window appears, click **Next.**

11. Select **Display a list of the known drivers for this device so that I can choose a specific driver** and click **Next.**

12. Highlight **Lucent Venus Modem PnP** and click the **Have Disk** button.

Downloaded from www.Manualslib.com manuals search engine

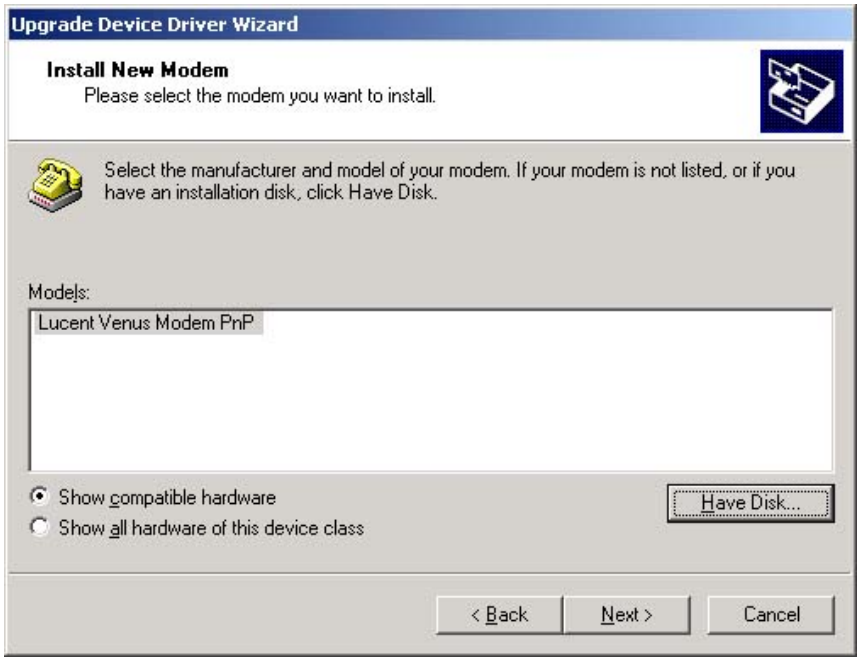
Upgrade Device Driver Wizard
Install New Modem
Please select the modem you want to install.
Select the manufacturer and model of your modem. If your modem is not listed, or if you have an installation disk, click Have Disk.
Models:
Lucent Venus Modem PnP
Show compatible hardware
Show all hardware of this device class
Have Disk...
< Back
Next >
Cancel

13. Load the floppy disk or compact disc whichever contains the device driver and type the drive path. Click **OK.**

14. Follow the on-screen instruction to proceed.

15. When the installation program finished, go back to the **External Fax Modem 56K Properties** window, click **Close** to complete the driver updating.

16. To verify if the device is well installed in your system and enabled, go to the **Device Manager** window. The **External Fax Modem 56K** should be found on the list. If not, contact your dealer for technical support.

Downloaded from www.Manualslib.com manuals search engine

Installation for Windows Millennium

1. Be sure the External Fax Modem 56K is well connected to your computer. Turn on your system and start Windows Millennium.

2. Go to **Start→Settings→Control Panel→System→Device Manager.**

3. **Modem** icon should be found if Windows Millennium detects the modem. If not, go to **Start→Settings→Control Panel→Modems.**

4. Click the **General** tab and press the **Add** button to add it in.

5. Click **Next** to set up the modem.

Downloaded from www.Manualslib.com manuals search engine

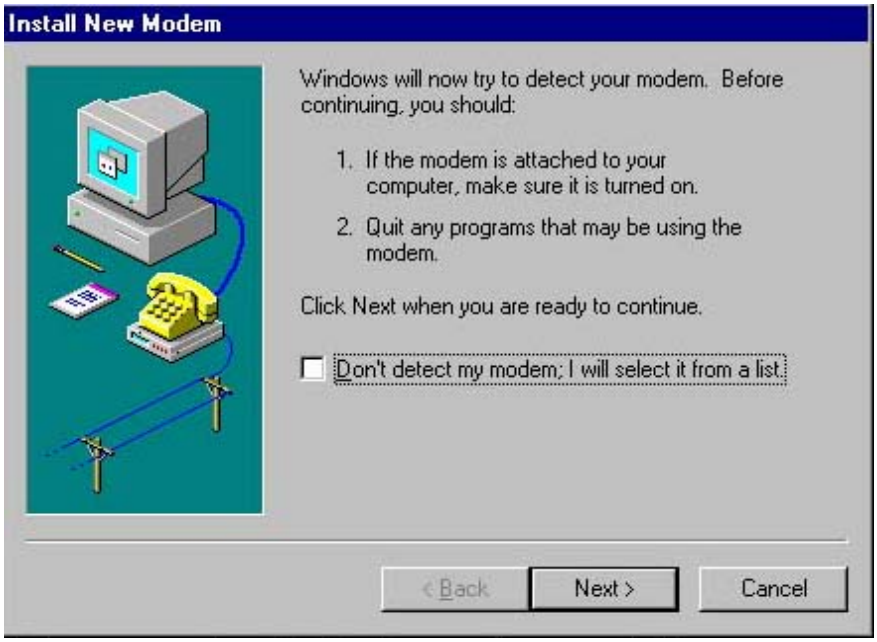
Install New Modem
Windows will now try to detect your modem. Before continuing, you should:
1. If the modem is attached to your computer, make sure it is turned on.
2. Quit any programs that may be using the modem.
Click Next when you are ready to continue.
Don't detect my modem; I will select it from a list.
< Back
Next >
Cancel

6. Click **Finish.**

7. Go back to your desktop, and click **Start→Settings→Control Panel→System→ Device Manager.**

8. Click **Modem** to expand. Highlight **Lucent Venus Modem PnP** and select **Properties**.

9. Click the **Driver** tab and press the **Update Driver** button.

10. Select **Specify the location of the driver (Advanced)** and click **Next.**

11. Select **Display a list of all the drivers in a specific location, so you**

Downloaded from www.Manualslib.com manuals search engine

can select the driver you want and click **Next.**

12. Highlight **Lucent Venus Modem PnP [6-8-2000]** and press the **Have Disk** button.

13. Load the floppy disk or compact disc whichever contains the device driver and type the drive path. Click **OK.**

14. Follow the on-screen instruction to proceed

15. When finished go back to the **External Fax Modem 56K Properties** window, click **Close** to complete the driver updating.

16. To verify if the device is well installed in your system and enabled, go to the **Device Manager** window. The **External Fax Modem 56K** should be found on the list. If not, contact your dealer for technical support.

Installation for Windows NT

1. Go to **My Computer →Control Panel**. Double-click **Modem**. Click the **Add…** button. Click **Next**.

Downloaded from www.Manualslib.com manuals search engine

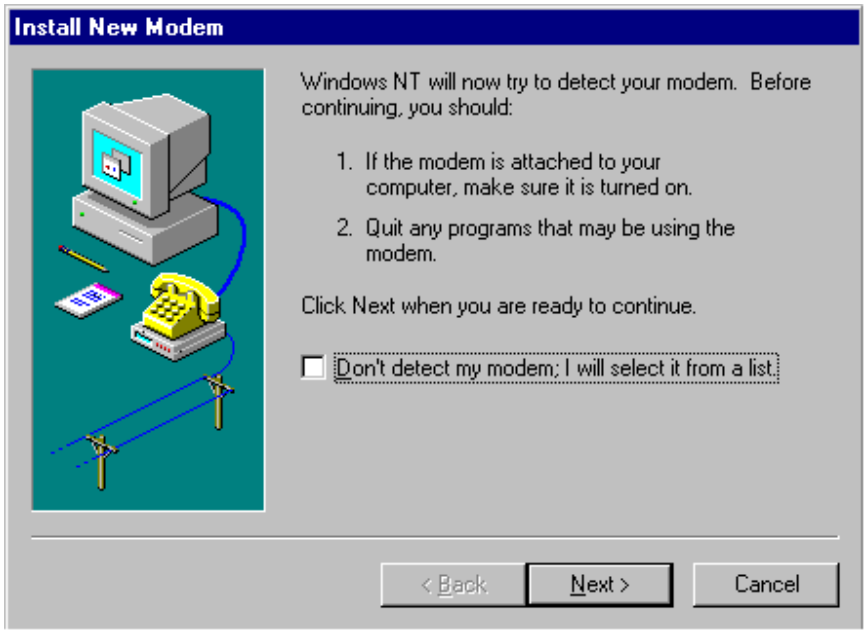
Install New Modem
Windows NT will now try to detect your modem. Before continuing, you should:
1. If the modem is attached to your computer, make sure it is turned on.
2. Quit any programs that may be using the modem.
Click Next when you are ready to continue.
Don't detect my modem; I will select it from a list.
< Back
Next >
Cancel

2. Follow the on-screen instruction to proceed. When the following dialog box appears, select **Change...**

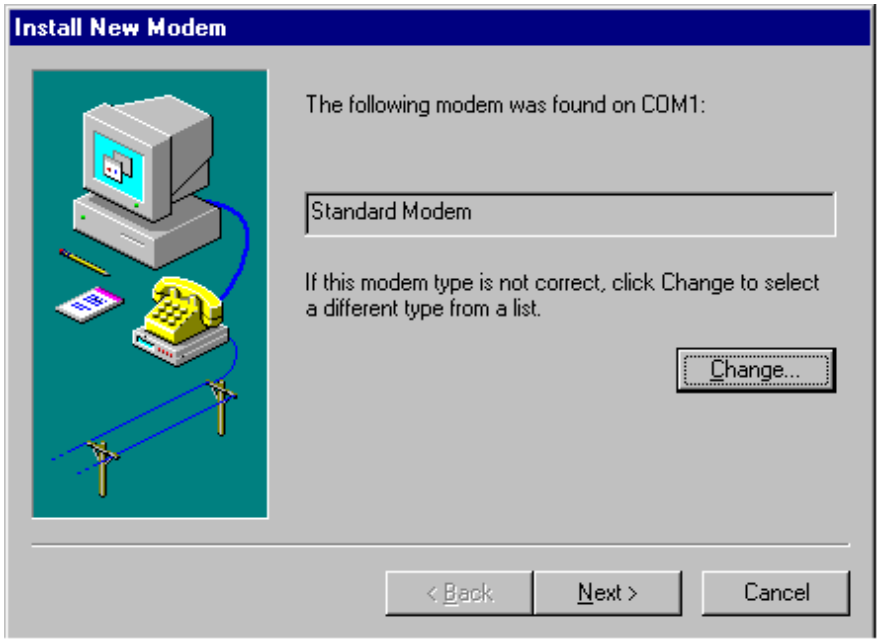
Install New Modem
The following modem was found on COM1:
Standard Modem
If this modem type is not correct, click Change to select a different type from a list.
Change...
< Back
Next >
Cancel

3. Select **Have Disk…**from the ''**Install New Modem**'' window. And make sure the External Fax Modem 56K floppy disk

Downloaded from www.Manualslib.com manuals search engine

or Compact Disc is loaded into your computer.

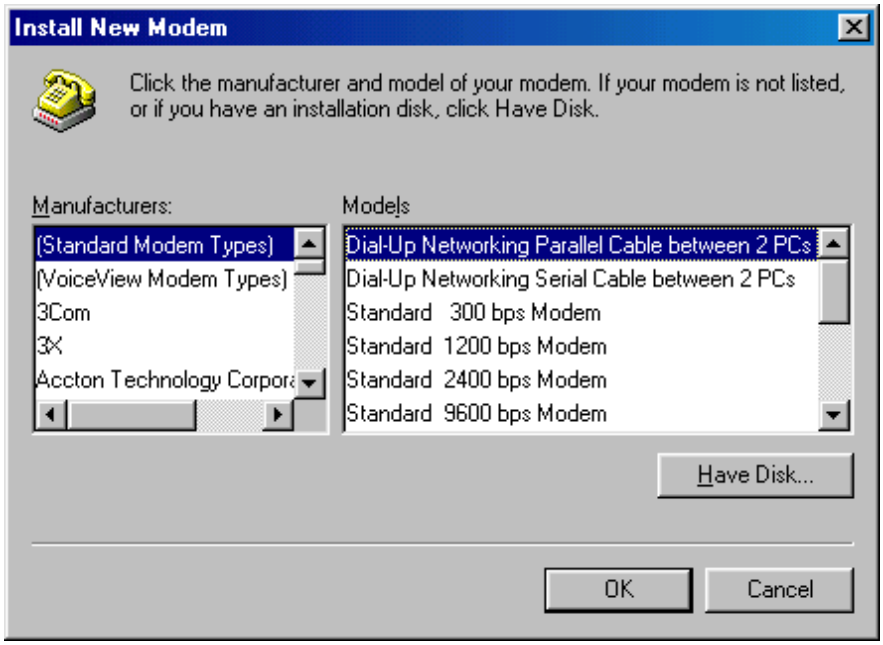
Install New Modem
Click the manufacturer and model of your modem. If your modem is not listed, or if you have an installation disk, click Have Disk.
Manufacturers:
(Standard Modem Types)
(VoiceView Modem Types)
3Com
3X
Accton Technology Corpor
Models
Dial-Up Networking Parallel Cable between 2 PCs
Dial-Up Networking Serial Cable between 2 PCs
Standard 300 bps Modem
Standard 1200 bps Modem
Standard 2400 bps Modem
Standard 9600 bps Modem
Have Disk...
OK
Cancel

4. Direct to your floppy disk drive or CD-ROM drive and select **EXTERNAL.INF**. Follow the on-screen instruction to proceed.

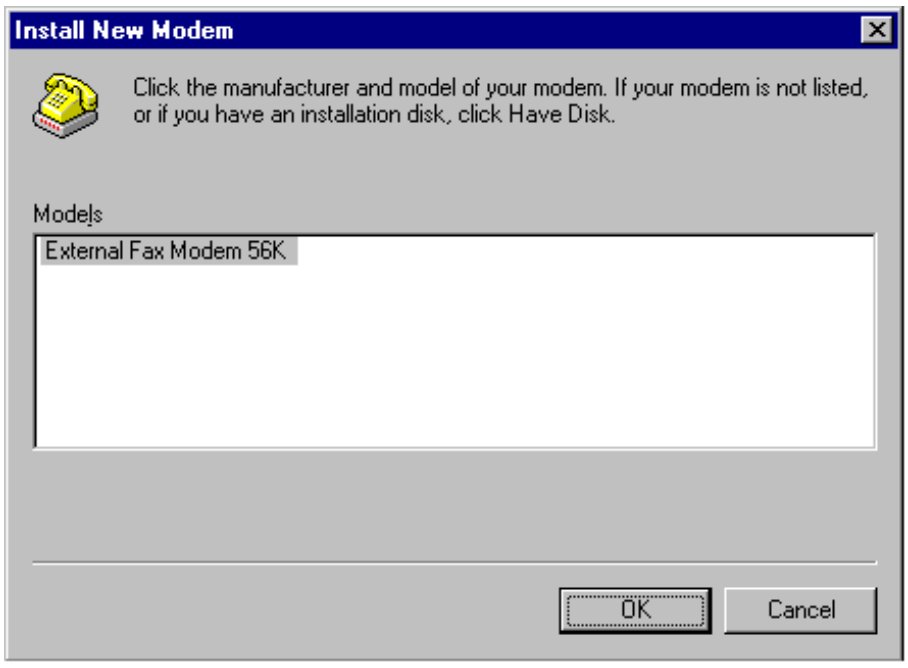
Install New Modem
Click the manufacturer and model of your modem. If your modem is not listed, or if you have an installation disk, click Have Disk.
Models
External Fax Modem 56K
OK
Cancel

Downloaded from www.Manualslib.com manuals search engine

5. Press **Next** to continue.

6. Click **Finish** to complete the installation.

Downloaded from www.Manualslib.com manuals search engine